

Assembly:

To install, you will need the following:

- Pencil and tape measure
- Philips screwdriver if needed and pliers
- Electric drill with assorted bits

Parts:

- Main unit (See Photo – A)
- Package of ceiling hooks (8) or wall mounting screws and anchors (See Photo – B1 or B2)
- 4 packs of PR-41202 hanging links, for hanging installations (See Photo – C)
- Glass holders (Secure to wine rack in pre-drilled holes. Do not overtighten.) (See Photo – D)

Please consult with your local hardware store if you have any questions or concerns about the construction of your walls or ceilings. They can assist you in selecting the proper hardware and procedures. The generic hardware provided will work for most applications. Always measure twice before drilling.

NOTE: If you have any doubt about your installation or your ceilings ability to offer the proper support for your wine rack, please contact a professional.

Mounting Directions:

Mounting Directions (Hanging):

Attached 4 supplied hooks to wine rack in pre-drilled holes. Make secure but don't over tighten. Determine where ceiling joist (beams, studs) are located. Place ceiling hooks so that the hanging links will hang straight down from the ceiling. It is important the ceiling hooks are secure within the joists so they will bear the weight of the rack and any glassware.

Mounting Directions (Wall Mount):

Assemble rack with all supports, then with rough frame work constructed use as a guide for installation. Measure carefully where you want to mount the rack on the wall use a pencil to mark where the screws attach to the wall.

Continued on page 2 →

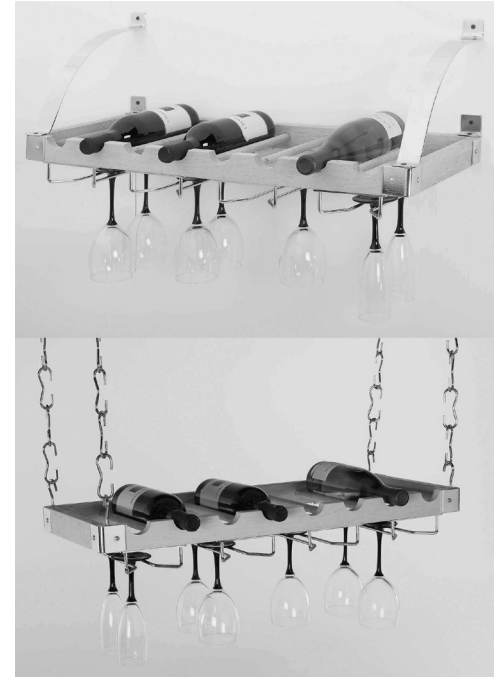


Photo A - Fully Assembled



B1 - Hooks

B2 - Screws

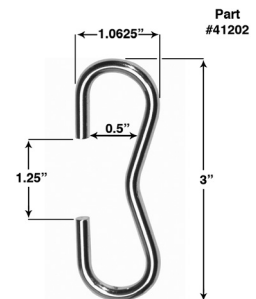


Photo C - Hanging links



Photo D - Glass holder

Remove the unit and drill holes using a 5/16" drill bit. When / if possible mount to a wall stud. Supplied anchors have a pull rating of 20 lbs. or more each and a shear rating of 50 lbs. each.

Insert the anchors into the drilled holes. They may need to be tapped in gently with a hammer. Use the supplied key to expand the anchor behind drywall. (See Photos E to I for proper and improper anchor install). Use supplied screws to attach.

Additional links and available. See www.prhousewares.com for a list of parts and e-tailers.

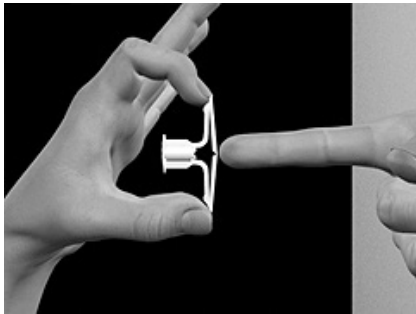


Photo E - Drill 5/16" diameter (8mm) hole. Fold anchor in middle.

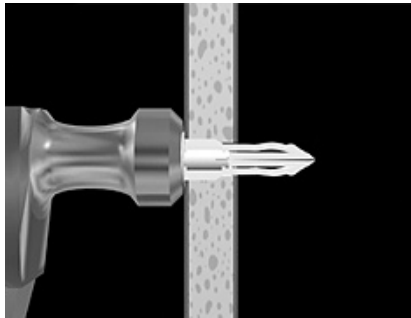


Photo F - Insert anchor in hole and tap flush with wall.

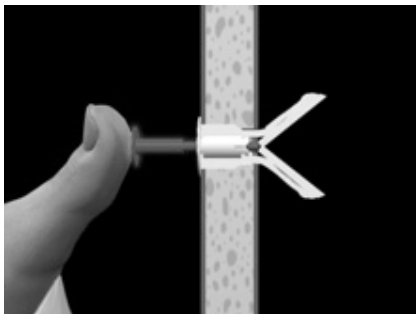


Photo G - Insert key to pop anchor open & lock behind hollow wall (not necessary for thick or solid walls). Do not force or hammer key.

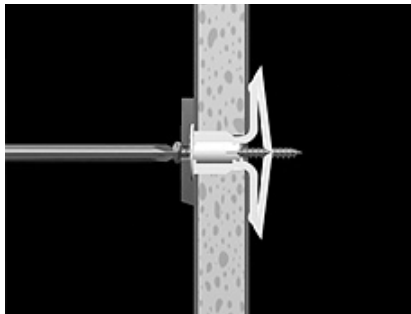


Photo H - Place item over anchor. Insert screw and tighten until screw is flush with fixture. Then, stop. The anchors also wedge securely in thick or solid walls, or in wood studs behind drywall.

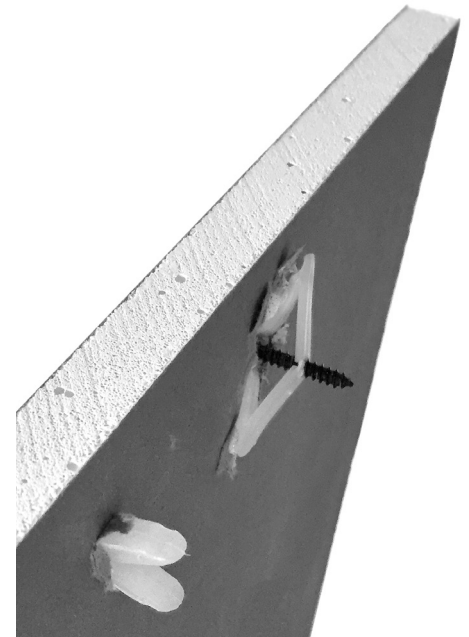


Photo I - correct (top) and incorrect (bottom).

Questions - Comments Damaged - Defective - Missing Parts

Contact us first, we will respond within 24 hours or less. Please provide our part number, your order number, place of purchase, address and any other info so we may address your concerns promptly.

info@prhousewares.com or www.prhousewares.com

Returns are only accepted when returned in new condition and only with an RMA from the seller.

Returns to: 501 I South Reino Rd. Ste 152. Newbury Park, CA 91320